

COURT HIRE

THE IGLOOHOME LOCK

Cost effective court hire access solution for your club

Tennis Australia has partnered with Igloohome to provide a cost-effective solution to tennis clubs for electronic gate access.

The Igloohome lock is integrated with the ClubSpark software that enables players to simply book & pay online, and receive a 9-digit pin that will provide them with access to the tennis courts at the time of their booking.

BENEFITS OF IGLOOHOME LOCK FOR THE CLUB:

-  Reduced administration impact to volunteers
-  Low-cost access solution
-  Sustainability of venues
-  Attract occasional players to your club




EASY Simple installation method that can be performed by a member of the club

 Minimal pre-installation requirements

 No internet connection required

 Works alongside an automated lighting control solution – which will be available from late 2021

BENEFITS TO YOUR MEMBERS AND OCCASIONAL TENNIS PLAYERS:

-  Improved & streamlined process to purchase memberships, hire courts etc, giving control, flexibility and freedom
-  Instantaneous access to courts
-  Visibility of courts to meet their requirements dependent on time and surface

For more information, read the Igloohome lock FAQs below.

Reach out to your CDO/TDO to express your interest!

play.tennis.com.au

COURT HIRE

IGLOOHOME

LOCK FAQ



What is the Igloohome lock and how does it work?

This easy to use lock provides a flexible access solution for anytime court hire that is unlocked via a **unique 9-digit booking PIN** generated when a booking is made using the ClubSpark online booking software.

When does the booking PIN open the lock?

Only when you want it to – the active period of each PIN is seamlessly integrated with the player's court booking made through ClubSpark (plus a grace period for entering and exiting the court for safety). This removes the need for committee members to provide keys or attend onsite to lock up late at night.

When a booking is made, when does the booking pin become active?

Instantaneously! If a booking has been made on the spot, the booking pin associated to that booking will work straight away – no need to book hours in advance.

Is there a limit to how many locks I can have set up at my Club?

No – ClubSpark can integrate with as many locks as you need.

NOTE: each lock requires a separate exchange code to be purchased from to activate the ClubSpark booking integration.

Will my booking PIN open all the locks at the Club?

No - each lock is assigned specifically to the court in ClubSpark.

NOTE: other administrative functions are available for committee members.

Does the lock on the gate also activate court lighting?

No, the lock will only provide access to the venue. Clubs will need to instruct players on how to operate lights, when lights are required. Tennis Australia are piloting a lighting solution that is integrated with ClubSpark and also activates via pin entry.



play.tennis.com.au



COURT HIRE

IGLOOHOME

LOCK FAQ



What type of battery is required, and how often does it need changing?

The lock uses a single CR2 Lithium battery available from your local supermarket, that is expected to last on average between 9 months to 1 year.

It may be useful to add this to your regular maintenance schedule to change it every 6 months along with other devices e.g. smoke alarms.

What happens if the battery goes flat?

Multiple warnings let administrators know that the battery is running low for several days / weeks before it drains completely.

However, in the unlikely event that the battery does go flat, a quick-release 'jump start' can be performed using a standard Alkaline 9-volt battery placed against the contact points located externally on the base of the lock.

Can a player get locked inside the court?

This is extremely unlikely – a grace period is active before and after the court booking time to allow players to enter and exist safely using their unique booking PIN if the lock has been locked while players are on court.

My lock has been vandalised, stolen, or has stopped working – what do I do next?

In the first instance, contact **Customer Support on 1800 752 983 or email play@tennis.com.au**.

Some elements are covered under warranty, others may incur charges, which will be explained during the issue resolution process.

Where can I find out more about the lock and the Igloohome app?

Our [Systems Support Site](#) contains user guides and a handy FAQ document, which can be downloaded [here](#).

Alternatively click the following link to review the manufacturer's user guide: [Igloohome app user guide](#)



play.tennis.com.au

